


DISCHARGE VALVE

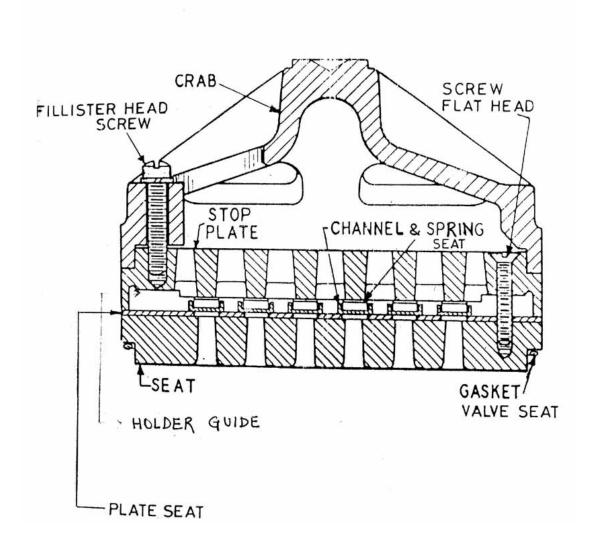

All manufacturer's names, numbers, photos, product description and/or part numbers are used for reference purposes only & it is not implied that any part listed is the product of these manufacturers. Since Approvement are made from time to time, the illustration and specifications are subject to change without notice.



5. DISCHARGE VALVE - MODEL 16 & 9B X 7 IHE NL

No.	Description	Ref Part No.	QTY
ı	VALVE DISCHARGE COMPT.	A67C2WSHA	_
ı	SEAT-DISCHARGE VALVE	A67C4WSC	1
-	PLATE-SEAT	A67C18WS	1
-	HOLDER GUIDE	1W89470	2
_	GUIDE	1W89610	18
_	SCREW-GUIDE HOLDER	W89608	4
_	STOP PLATE-DISCH. VALVE	A67C6WSHA	1
_	PIN SUPPORT	29A13A35	8
_	BALANCER-FLOW	X1559T6	2
_	WASHER	1W89634	2
_	SET CHANNELS & SPRINGS	A67C33WS	1
_	CHANNEL	NSS	_
_	CHANNEL	NSS	_
_	CHANNEL	NSS	_
_	CHANNEL	NSS	_
_	SPRING	NSS	_
_	SPRING	NSS	_
_	SPRING	NSS	_
_	SPRING	NSS	_
_	WEAR STRIP	NSS	_
_	WEAR STRIP	NSS	_
_	WEAR STRIP	NSS	_
_	WEAR STRIP	NSS	_
_	SCREW-MACHINE-FLAT-HD.	77A2S150	2
_	CRAB-VALVE	40502452	1
	MACHINE SCREW	87A2S152	2
	LOCKWASHER	14A5855	2
	GASKET VALVE SEAT	X1014T202U	1
_	SET SCREW	WIN7409	1
_	NUT SET SCREW	WIN7381	1
_	JAM NUT	19A4C10DC	1